 


# DAEWOO

GB

## INSTRUCTION MANUAL

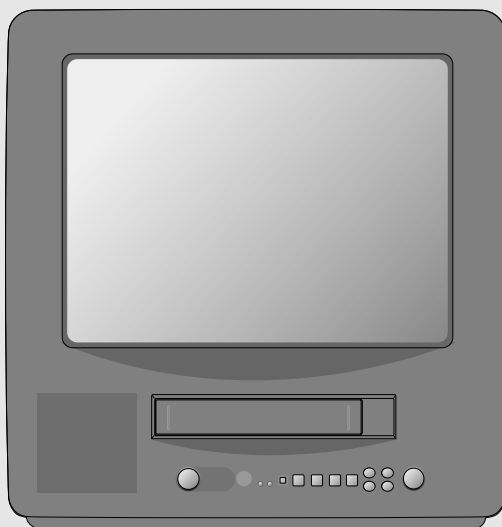

14H1T, 14H2T, 14H2TEG  
14H2TBL, 20H1T, 20H2T  
GB14H1T, GB14H2T, GB14H2TEG  
GB14H2TBL, GB20H1T, GB20H2T

 
 
 
 
CUSTOMER SERVICES

HELPLINE

01189 252 577



# W O R T H k n o w i n g

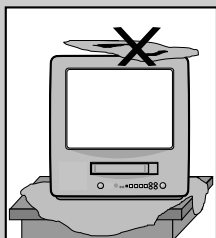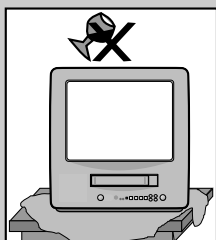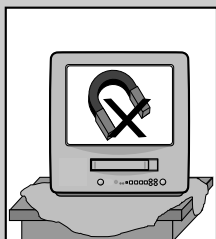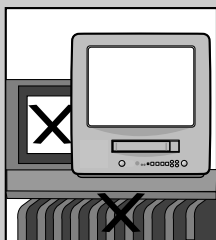

*Please keep the televideo machine's guarantee card and receipt safe for warranty purposes.*

## Precautions

- ◆ Read carefully through this manual to familiarise yourself with this high quality televideo.
- ◆ Make sure the rating of your household electricity supply matches that shown on the back of the televideo.
- ◆ Refer to this chapter and the "Initial installation" chapter to help you install and adjust your televideo.

### Do not...

- ◆ expose the televideo to high levels of humidity and heat, to avoid the risk of fire and electric shock.
- ◆ open the televideo. Have a qualified technician carry out repairs.
- ◆ connect the televideo to the power supply if you have just moved it from a cold to warm environment. This can result in condensation inside the recorder and cause serious damage to the machine and cassettes. Wait around two hours to allow it to reach room temperature.

### Make sure...

- ◆ the televideo is placed on a steady, flat surface.
- ◆ you place the televideo where there is good ventilation all around.
- ◆ you clean the televideo only with a soft, lint-free cloth : do not use aggressive or alcohol-based cleaning agents. (Unplug the set from the mains)
- ◆ you disconnect the power supply if the televideo appears to be working incorrectly, is making an unusual sound, has a strange smell, has smoke emitting from it or liquids have got inside it.  
Have a qualified technician check the televideo.
- ◆ you disconnect the power supply and aerial if you will not be using the televideo for a long period or during a thunderstorm.



### For your own safety!

- ◆ There are no components in this televideo you can service or repair yourself.
- ◆ Do not open the case of the televideo. Only allow qualified personnel to repair or service your set.
- ◆ This televideo is designed for continuous operation. Switching it off does not disconnect it from the mains (stand-by)  
To disconnect it from the mains, you have to unplug it.
- ◆ Recording any copyright protected material may infringe a copyright.



**Note :** *If the televideo is moved or placed in a different direction, the main power switch must be switched off for at least 15 minutes in order to take out colour purity errors on the screen.*



# W O R T H K n o w i n g

*Before doing anything with the televideo, please read the chapter "initial installation".*

## Contentss

### Controls

The remote control unit .....	2
The front panel's button, On screen display .....	3

### Initial installation

Connecting up the televideo, Fitting the remote control's batteries .....	4
Setting time and date, Language selection .....	5
Automatic tuning system Edit, Manual tuning, Fine tuning .....	6-7

### Playing cassettes

Playing back .....	8
Variable picture search, Auto repeat .....	9

### Recording Cassettes

Simple recording - REC, One touch recording - OTR	
When recording time overlaps .....	10
Timer recording, Timer review - erasing or changing, Auto tracking .....	11

### More functions

Timer recording using Videoplus+(Showview):Option .....	12
Index +/-, Resetting the counter to zero, Mute, Child lock .....	13
Cassettes, Picture adjustment, Recall .....	14
Wake up Timer, Sleep feature .....	15
Teletext (Option) .....	16

### Connections and assembling

Assembling, Copying .....	17
Scart socket .....	18
Before requesting service .....	19

 


- ◆ *On the following pages, the pictures show the buttons you press on the remote control to perform the function, and what you should see on the On Screen Display or machine display (if present).*

# CONTROLS


◆ The remote control is the principle means of control, but the main playback and record functions are also available on the front of televideo.

## The remote control unit

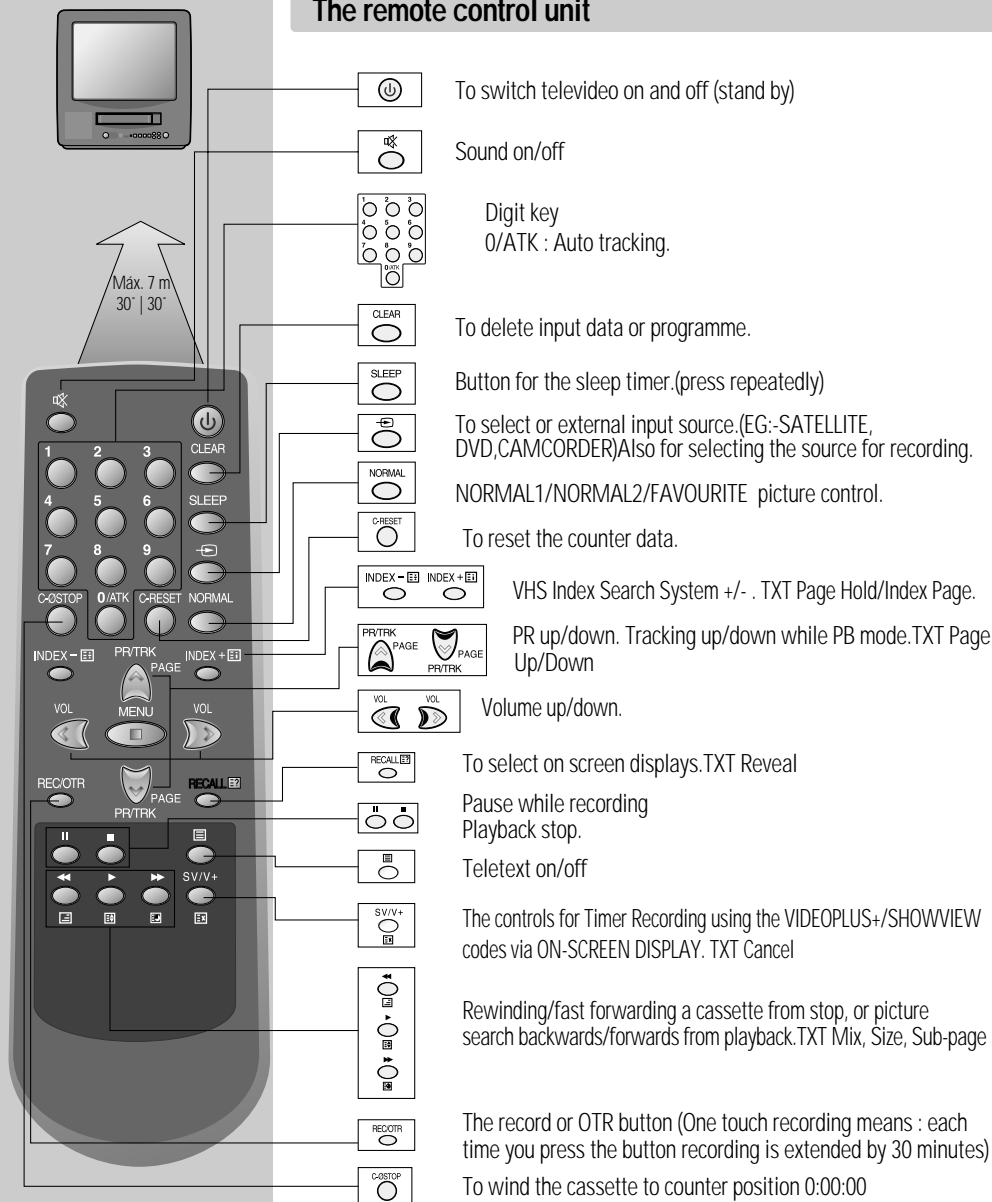


# C o n t r o l s

 
## The front panel's button

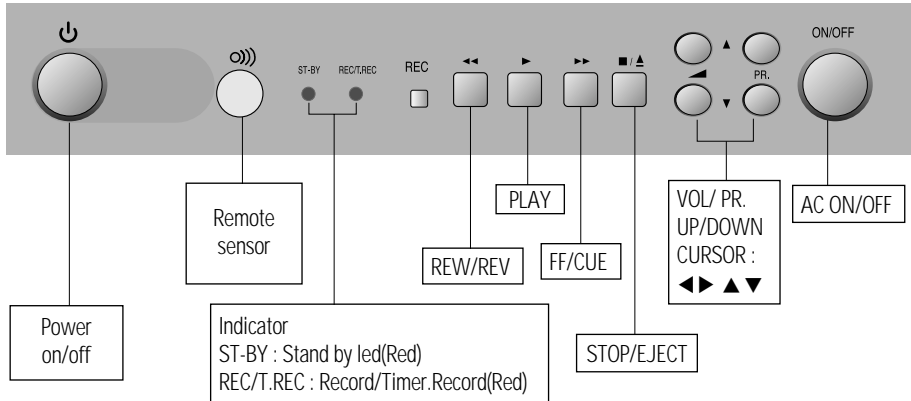

## On screen display

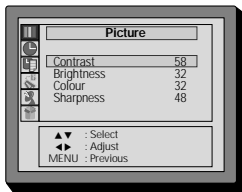 

 The televideo's menu system gives you easy-to-understand access to the less used functions such as tuning to stations, clock setting and more

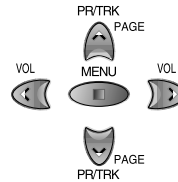

The menus show you which button to press for the next step.

# INITIAL installation

 


Please place your televideo

- ◆ Horizontally on a flat, steady base so that air can circulate around it for ventilation.
- ◆ Away from humidity and heat, magnetic fields, such as those from loudspeakers etc. and with no heavy objects placed on top.

## Connecting up the televideo

Switch off all components when connecting or disconnecting cables.

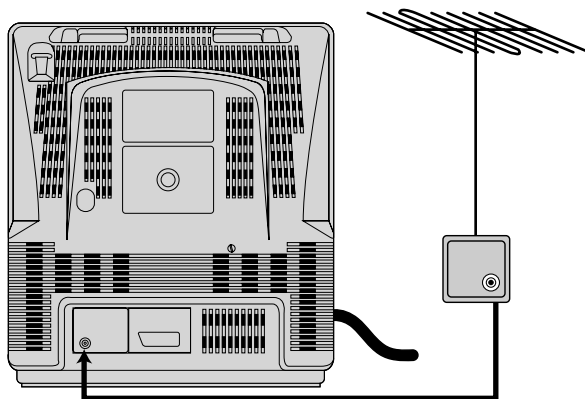


- ◆ Plug the aerial cable into "AERIAL" socket of the televideo.
- ◆ Make sure the rating of the household mains supply matches the rating shown on the back of the televideo.  
Now plug in the mains lead.

## Fitting the remote control's batteries

 - 1 Remove the battery cover on the reverse side of the remote control.



- 2 Install two batteries ("AAA" size) into the remote control.




- 3 Replace the battery cover




- ◆ Fit the batteries, size 1.5V AAA as shown above
- ◆ Protect your environment by returning used batteries to your dealer. Since batteries contain toxic substances they require special disposal methods.
- ◆ Make sure the batteries are always of the same type and age, and remove them from the remote control if you are not using it for a long period.



# I n i t i a l INSTALLATION

 - ◆ Press the main power switch on the front panel to turn on the set then the  button. Language, Country selection menus will be displayed.

## Setting time and date

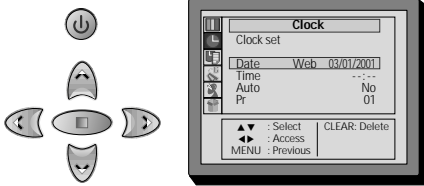 

Call up the teletext menu.  
And move the cursor down to the "Clock" line.  
Access by pressing the ◀▶ button.

Set the numbers for the exact time and the correct date.

Date : dd/mm/yy  
Time : hour/min.

### ◆ AUTO CLOCK SETTING (OPTION)

 
If you want to set automatically the clock data, you must change the auto column from "No" to "Yes", then ensure the Pr. No. column has a channel with uncorrupted teletext. If selected channel has a poor signal, clock setting data may be corrupted. If your aerial reception is generally poor then please set the clock data using the manual method.

Recommended channels are as follows: (with TELETEXT channel)

Country	Channel name	Country	Channel name	Country	Channel name
U.K	BBC1, BBC2	Spain	TVE, TV3	Ireland	RTE1, NET2
Switzerland	SF1	Germany	ARD, ZDF	Belgium	BRTN
France	TF1, FR2	Sweden	SVT1	Italy	RAI1, RAI2
Norway	NRK1	Nederland	NED1, NED2	Denmark	DR1

- ◆ N.B. : The time and date will be lost if the set is ever switched off by the main ON-OFF switch.

## Language selection

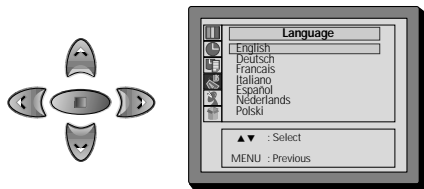

You can choose to display the on screen menus in English, Deutsch, Italiano, Español, Nederlands, Français, Polski.

To change the on screen language.

Select the language menu at the Main menu.

Place the cursor to "Required Language" with the PR. ▲▼ buttons.



### ◆ Mistake or change?

Move cursor to the position you wish to correct by using ◀▶ ▲▼.

- ◆ If you do not set "Date" and "Time" menu, you can not set Wake up timer and Timer programme.

 
# INITIAL installation



- ◆ If you want to use AV(Audio Video input) from a DVD or VCR instead of RF(Aerial input). Press the button.

## Automatic tuning system

Select the Install menu at the menu.  
Place the cursor to "Auto setup" with the ▲ ▼ buttons.

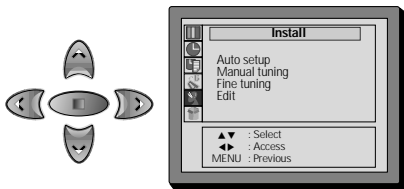


Press the ◀▶ button.

Country selection menu will be displayed. Please select country, then access.  
The cursor will move from left to right on the VHF,UHF Band.  
Please wait until the Edit menu appears.



## Decoder(option)

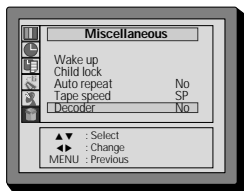 


If you receive the Canal + Channel please set the Decoder mode to "Yes" in the Miscellaneous menu.

# I n i t i a l INSTALLATION
 
## Edit

The Edit menu shows you the programme position assignment.

You can change this programme position assignment according to your personal preferences.

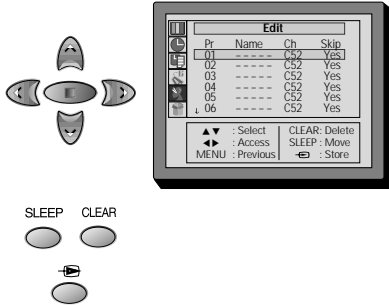

### Moving the channels

Position the cursor to Pr. No. to move and press the SLEEP button. Select Pr. No. the colour will be changed.

Position the cursor to Pr. No. to change and press the SLEEP button.

### Skipping the channels

You can select skip "Yes" or "No" with the ◀▶ buttons.

A programme marked with with Skip "Yes" is skipped when using PR buttons, however, whenever a skipped.

Pr. No. is selected by Digits 0-9 the number on the screen will be displayed in red along with the picture.

### Delete programme position data

Position the cursor to Pr. No. to delete and press the CLEAR button.

While this is being carried out the "Please wait !" appears and the deleted Pr.No. will transfer to programme No. 99 and is changed to skip "Yes".

ABCDEFGHIJKLMNOPQRSTUVWXYZ  
UVWXYZ+-. 0123456789

 
### Enter a station Name

Press the ◀▶ button.

Station name tables appear above the screen.

Using the ▲▼ button, select the desired letter or number or blank .

If you want to store press -▶ button.

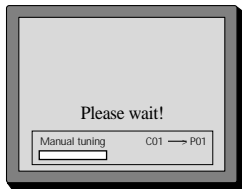

### Manual tuning

Locate the cursor to Manual tuning with ▲▼ buttons at the Install menu and then press ◀▶ buttons.

During manual tuning "Please wait !" On Screen Display will be displayed.

Keep tuning until the channel received matches the programme number.



### Fine tuning

 
If you are unable to get a good picture or sound because of poor reception, it is possible to adjust the fine tuning, to try to improve it. Select the Fine tuning at the Install menu press ◀▶ buttons to get the best picture and sound.

# PLAYING cassettes

 


- ◆ Your televideo is switched on by the main power switch on the front panel and by the  button.

 
## Playing back

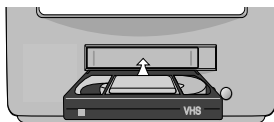


 
Load the cassette by pushing it smoothly and squarely into the cassette bay, with its windows pointing up.



 
Start playback by using the  button on the (Remote controller or front panel button)




 
Stop playback by using the  button on the (Remote controller or front panel button)



Eject the cassette (front panel button only)



To fast forward use the  on either the front panel or remote controller from the cassette stop position




Rewind by using the  on either the front panel or the remote controller

- ◆ A smaller picture may be seen while switching from the Search mode to the PB mode. This is not a sign of malfunction.
- ◆ When you load a protected cassette (e.g. pre-recorded film) playback starts automatically.
- ◆ During search, you don't hear the sound.
- ◆ You can reduce horizontal interference stripes resulting from inaccurate tracking (when playing tapes of poor quality or recorded on other machines) by using the PR/TRK buttons during playback or try auto trackin using O/ATK button.
- ◆ After approx. 5 minutes in still mode, the cassette plays back automatically.

# P l a y i n g CASSETTES

 
- ◆ Your televideo is switched on by the main power switch on the front panel and by the  button.

## Variable picture search



Starting from playback you can control the search speed in 2 steps either forwards (▶▶) or backwards (◀◀). Press repeatedly. Play (▶) button switches back to normal playback.


## Auto repeat

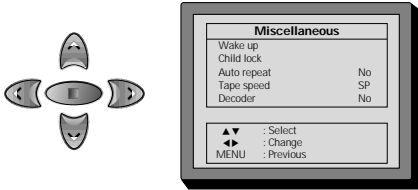 

Move the cursor down to the "Auto repeat" line. Change to "Yes" by cursor ◀▶.

**Auto repeat works with or without safety tab.**

 Playback → End of cassette → Rewind → Playback




**Note :** This televideo has the function of NTSC playback (SP tape only) Don't use NTSC SLP tape. Although you can see the picture and sound, we can not guarantee picture and sound quality.

# RECORDING cassettes




 - ◆ Your televideo is switched on by the main power switch on the front panel and by the  button.


## Simple recording - REC



 
Choose the station whose programme you want to record.



Start your recording.

 


 If you wish to interrupt recording briefly -then continue.



Stop your recording.

## One touch recording - OTR

 


 
Choose the station you want and press "REC/OTR" repeatedly until desired period is displayed.

### ● OTR preparation

 
Before setting OTR, Make sure that....

The cassette tape has the safety tab.

The tape is long enough to record the programme.

- ◆ During recording you can switch the screen off by pressing  button. Meanwhile the recording continues.
- ◆ You can release the OTR mode by pressing "stop" during REC mode.
- ◆ If the display shows "AV" instead of "PR" press  button.
- ◆ If you program events without setting the time, it will automatically return to "Clock" mode. If you program events that overlap, at least one of your events will not record correctly.

## When recording time overlaps

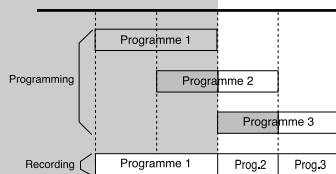


When setting the programmable timer, be careful not to overlap the preset times. If you happen to overlap the preset programmes, the End time has priority and the overlapped programmes cannot be recorded.

- ◆ For timer recording, clock, date, and stations must be set correctly.
- ◆ Load a cassette with its safety tab in place and with sufficient free space for the recording.
- ◆ To enter station numbers using the cursors ▲▼.

# R e c o r d i n g CASSETTES
 
## Timer recording

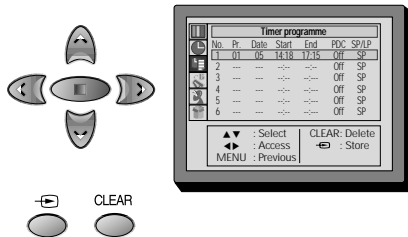

Call the televideo's "menu", choose "Timer programme".

Select a free timer memory.

Set .....

- the date (date, daily = osd is displayed "day", sun- sat)
- start and end time.
- the recording speed.

- ◆ You can switch your televideo off during recording using the button. (Don't use the main power button (ON/OFF) on the front panel of the set.) The televideo will switch on and off automatically to record the timer event.
- ◆ If you have made a mistake, move to the position you want to change using the ▲▼◀▶ button and change the setting.
- ◆ The recorder will eject cassettes which have the safety tab removed.

## Timer review - erasing or changing

Call the televideo's "menu", choose "Timer programme".

Select the programming to erase or change. If you want to erase the programming press button CLEAR.

### If you wish to make changes :

Move to the position you want to change using the ▲▼◀▶ buttons.

Change the setting using the ▲▼ buttons.

## Auto tracking

If you press the 0/ATK key in Playback mode, the televideo will operate the auto tracking function again.



 
 
- ◆ If you wish to record from a satellite receiver select under "Pr" the satellite programme location or AV (depending on the connection with the aerial cable or a SCART cable.)  
NB : Leave the satellite tuner switched on and to the programme you want to record.

# RECORDING cassettes



- ◆ For timer recordings, clock, date, and stations must be set correctly (page 5).
- ◆ Load a cassette with its safety tab in place (see page 13) and with sufficient free space for the recording.



## Timer recording using VideoPlus+ (ShowView): (Option)

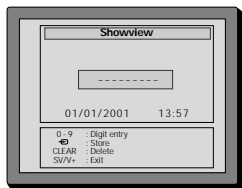

Call the VideoPlus+ (ShowView) menu.

From your TV magazine, type in the number next to the programme you want to record. (Digit key)  
Confirm (➡ button)

  - ◆ Showview : FRANCE/CONTINENTAL
- ◆ VideoPlus+ : U.K. Only

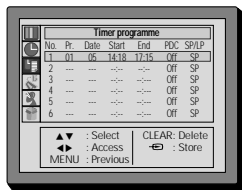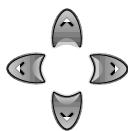

If you press the ➡ button, Timer Programme menu will be displayed.

If you want to change data, Press ▲▼ buttons.

Confirm (➡ button)



(Do not use the main power button on the front panel of the set.) The televideo will switch on and off automatically to record the timer event.

- ◆ If you have not set the clock, when you press the VideoPlus+(Showview) button to set timer recording, the set will automatically change to the "CLOCK" menu.
- ◆ If you don't have the **VideoPlus+(Showview) numbers** see page 11 for the normal timer.
- ◆ If you have made a **mistake**, move back to the relevant position with the ◀ button and change the setting.
- ◆ During recording you can switch the **screen off** by pressing ⏻ button.
- ◆ The screen will indicate if the station is not programmed (page 5-7).
- ◆ Should programmings **overlap**, you get a warning.
- ◆ In the case of error messages, correct the input or check the date and time on your televideo (also check your TV guide).




- ◆ Your televideo automatically sets an electronic marker (index) at the beginning of each recording and timer recordings. It is these markers which are detected by the index function.

# M o r e FUNCTIONS

 
## INDEX +/-

INDEX +  

Press the button depending on the number of recordings (index marks) that you wish to wind forward.  
e.g. 3x for 3 recordings ahead.


INDEX -  

 Press the button depending on the number of recordings (index marks) that you wish to wind backwards.  
e.g. 3x for 3 recordings back.


## Resetting the counter to zero

C-RESET  

 Press C-RESET button to reset the counter to 0 : 00 : 00


C-ØSTOP  

 After you have finished recording pressing the C-ØSTOP button will cause the televideo to wind to the position 0 : 00 : 00 and stop.

## Mute



Pressing the mute button once turns the sound off.  
The sound returns if button is pressed once more  
The mute maintains when you press Pr ▲ ▼ or  buttons.


## Child lock



 Choose "Miscellaneous" from the "menu".  
You can prevent use of the Televideo without the remote controller. The set is child locked after you input any secret number subsequently the TV picture will be overlaid with the child lock (OSD) On Screen Display and the sound will be muted. And VCR playback will be inoperable.

# M O R E f u n c t i o n s

## Cassettes

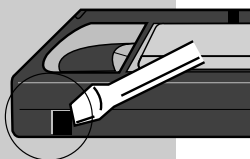


Use only good quality tape cassettes with the VHS logo.

- ◆ Keep cassettes away from excessive moisture or dust, magnetic and electrical fields eg. (loudspeakers and computers).
- ◆ Always wind the tape to the beginning when you have finished. Store with the full spool at the bottom and with the cassette in its cover. You can protect your precious recordings from being wiped by breaking out the safety tab on the side of the cassette (some cassettes have a slide). Should you wish to re-use the tape after removing the tab, cover the hole with adhesive tape.

## Recording/Playback time of Video tape.

 Type	Timer Recording/Playbacktime	
	SP Mode(Standard Play)	LP Mode(Long Play)
E-30	30 min.	1 hour
E-60	1 hour	2 hours
E-90	1 hour 30 min.	3 hours
E-120	2 hours	4 hours
E-180	3 hours	6 hours
E-240	4 hours	8 hours
E-300	5 hours	10 hours

## Picture adjustment

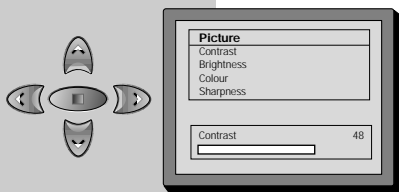

Choose "Picture" menu and after selecting the appropriate title. Press ◀▶ button to adjust to desired level.

- ◆ When you press the NORMAL button repeatedly you can call up three picture settings for NORMAL1(hard picture), NORMAL2(soft picture),FAVOURITE(adjustable picture).
- ◆ The last set value is automatically stored in FAVOURITE.
- ◆ Note that if you set the brightness and contrast values too low, the On Screen Display becomes so dark. You can not see it.

## Recall

When this button is pressed, the following contents are displayed.

Pr No., Present time (Clock), VCR status, VCR counter.

 
These items remain on screen for about 5 seconds.

During VCR mode (e.g. FF/REW, CUE/REV, INDEX+/-,etc) On Screen Display does not disappear.

# M o r e FUNCTIONS

- ◆ You can program your televideo so that it switches on and/or off (with the selected station) at a time you want.


## Wake up Timer



Press ◀▶▲▼ buttons to adjust to desired wake up time and Pr. No.

- ◆ Adjusting the "Wake up" once will cause the televideo to switch on every day at the same time (till you clear or change the setting)

## Sleep feature

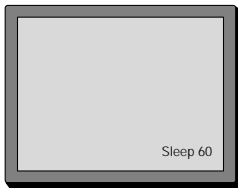 

You can set your televideo to automatically switch off after a period of 20 to 120minutes.

By pressing the sleep button repeatedly.

To cancel select "0"

- ◆ In eject mode if the Playback, FF/REW, STOP/EJECT, INDEX+/- key is pressed the  symbol (On Screen Display) is displayed.

# MORE functions

## Teletext (Option)

### SWITCHING TELETEXT ON/OFF

Press the TELETEXT button (  ). The index page viewed last will appear. Press the TELETEXT button to return to the TV mode.

### COLOUR BUTTONS IN TOP/FLOF TELETEXT

A red, green, yellow and cyan field is shown at the bottom of the screen.

If TOP or FLOF teletext (FASTEXT) is transmitted by the station, by pressing the corresponding colour button on the remote controller, you can easily select the desired page.


### SELECTING PAGES

The NUMBER buttons 0...9 are used to enter a page number.

The selected page number appears at the top of the screen and the page appears after a short time.

The UP/DOWN buttons increase or decrease the current page number by 1.

 
### INDEX PAGE

You can switch directly to the programme preview (with TOP text) or the overview page of the station you are currently viewing by pressing the INDEX (  ) button.


### PAGE HOLD


Several sub pages can be combined under a page number and are scrolled at an interval determined by the TV station.

The presence of sub pages is indicated by, for example, 3/6 beneath the time, which means that you are looking at the 3<sup>rd</sup> page of a total of 6 pages.

If you want to look at a subpage for a longer period of time, press the HOLD (  ) button. The contents of the subpage shown are kept on the screen and no longer updated or switched to other subpages. Pressing the HOLD button again, the current subpage appears.

### CALLING UP SUBPAGE DIRECTLY

 Pressing the SUBPAGE (  ) button "Page No./..."


appears at the bottom of the screen. Enter the subpage number that you want to call up with the NUMBER buttons 0...9, for example, the 2<sup>nd</sup> page. sequence 0002. The desired subpage is sought and displayed. To exit, press SUBPAGE (  ) button again.

### WATCHING TELEVISION DURING TELETEXT MODE

Some pages are continually updated, for example, stock market reports, sports announcements, and the latest news. If you want to watch TV and stay informed at the same time, press CANCEL (  ) button.

The regular programme is still visible when the teletext symbol (  ) appears at the top of the screen. Pressing the CANCEL button again, the teletext page will appear with the updated information.

### REVEAL ANSWER

This function can be used on certain pages to reveal the solution of riddles. Press the REVEAL button (  ) to reveal a hidden answer and press again to hide it.

### TV/TELETEXT ( )

Watch the TV programme and the Teletext pages simultaneously. The next press returns to the normal display.

### CONTRAST AND BRIGHTNESS CONTROL IN TELETEXT MODE

Press the MENU button in teletext mode, the contrast and brightness control menu will be displayed in the bottom of the screen. You can adjust contrast and brightness using the corresponding colour button on the remote controller.

### DOUBLING CHARACTER SIZE

Repeatedly pressing the SIZE button (  ) doubles the character size in the following order:

 
Upper half of the page —> Lower half of the page —> Return to normal size.

# Connections and ASSEMBLING


- ◆ Switch off all components when connecting or disconnecting cables.

## Assembling


Should you wish to assemble your own film, from camcorder footage for example, use the assembly technique for smooth edit points :



 - ◆ Move the tape to the position at which the new scene is to be added using the play functions



 
- ◆ Wind back slightly before the edit point and put the machine into pause using the PAUSE button (Don't press STOP)



- ◆ Now go directly into record.

For the best results, the source cassette from which you are recording should already be playing back when you start recording

## Copying

 To copy to your televideo from another video machine, connect the two machines via a cable between their AV sockets and select as programme "AV" using the  button. (The AV socket on this machine is the scart socket at the rear)

Set the other video machine to playback and your Televideo machine to record.

To record onto another VCR picture and sound of the selected station or recording is always available on the EURO AV scart socket.

On the other video, select its AV input and set the machine to record.

Switch your televideo to playback at the position you want copying to start.


## Connections and ASSEMBLING
 
### Scart socket

This is used to connect : a VCR a CAMCODER and a video game console or satellite TV receiver or DVD.  
In most cases, the set changes automatically to AV mode, when the VCR connected is in playback mode.  
If not, press the AV button on the remote controller.

The AV will be displayed on the screen with the current programme number.

In AV mode, you can change the TV programme number with the ▲ ▼ buttons or the Number buttons 0-9.

You must turn the external equipment off to return to the TV mode or press the  button.

PIN	Signal Designation	Matching Values
1	Audio Out (linked with 3)	0.5Vrms, Imp < 1k $\Omega$ (RF 60% MOD)
2	Audio In (linked with 6)	0.5Vrms, Imp > 10k $\Omega$
3	Audio Out (linked with 1)	0.5Vrms, Imp < 1k $\Omega$ (RF 60% MOD)
4	Audio earth	
5	Blue earth	
6	Audio In (linked with 2)	0.5Vrms, Imp > 10k $\Omega$
7	Blue In	0.7Vpp $\pm$ 3 dB, Imp 75 $\Omega$
8	Slow (Function) Switching	TV : 0-2V, PERI : 9.5-12V, Imp > 10k $\Omega$
9	Green earth	
10	NC	
11	Green In	0.7Vpp $\pm$ 3 dB, Imp 75 $\Omega$
12	NC	
13	Red earth	
14	NC	
15	Red In	0.7Vpp $\pm$ 3 dB, Imp 75 $\Omega$
16	Rapid Blanking Switching	Logic 0:0-0.4V, Logic 1:1-3V, Imp 75 $\Omega$
17	Video earth	
18	Rapid Blanking Earth	
19	Video Out	1Vpp $\pm$ 3 dB, Imp 75 $\Omega$
20	Video In	1Vpp $\pm$ 3 dB, Imp 75 $\Omega$
21	Common earth	

- ◆ In SCART Slow SW mode, when you insert the tape without tab, it will playback.  
But, in SCART Fast SW mode, when you insert the tape without tab, it will not playback and only load.
- ◆ If you insert the SCART plug in playback status it will change to scart mode and VCR will revert to stop mode.

## Before requesting service

### Mains supply

the televideo's power indicator does not light  
your televideo doesn't work

- The mains lead is not connected to the wall socket.
- Condensation may have formed when moving the televideo from a cold to a warm room.  
Wait until the video reaches room temperature.
- Various safety devices have been triggered.  
→ Switch off the main power supply and switch it on once again, after waiting a few minutes.

### Recording

doesn't start, the cassette starts playback  
or is ejected.

- Is a cassette loaded?
- Has the record tab been removed from the tape?

### Play back

no colour in picture reproduction, on tape  
playback  
Snowy picture on tape playback

- Has tracking been adjusted? → Adjust the tracking
- Are the video heads dirty? → Request professional service
- Are the video heads worn out?  
→ Replace them.
- Is the tape old?

The digits of the tape counter do not  
change, during tape playback.

- Is a non-recorded part of the tape being played back?  
→ When a non-recorded part of the tape is played back,  
The tape counter does not advance.

A cassette won't load.

The cassette won't FF/REW,PB,REC

Timer is recording incorrectly

A loud noise when left in Stop mode.

- Is there a cassette already loaded?
- The cassette is already fully wound back or to the end.
- Is the clock set correctly?
- If no play or record function is used for about 5minutes when left in Stop mode, the televideo switches its motor off to conserve the mechanism.

◆ We strive to continuously improve our products - we therefore reserve the right to make technical changes without notice. The information contained in this booklet is therefore subject to change and is not legally binding.